
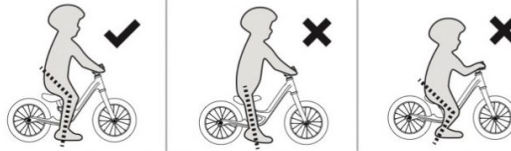


Installation Guide

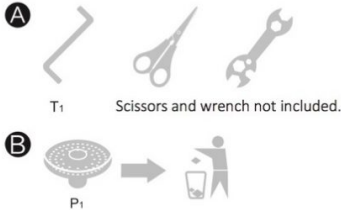

The seat must be adjusted based on the child's height. Optimum seat height is when the child's feet are flat on the ground and their knees are slightly bent. See Image above.

Preparation before assembling

- A** Open the tools kit box and take out assembly tools (T1)
- B** Remove protector (P1)
(Please dispose as recyclable waste)

Start Assembly

1 Assemble the Seat

Assemble the seat (Image 1), (part a) Adjust the seat tube to a proper position based on the child's height, and make sure the safety line on seatpost can't be seen. Use left hand to rotate the quick-release nut (part c), and use right hand to tighten the quick-release lever (part b). Close the quick-release lever. If the seat is loose, open the quick-release lever, re-tighten the nut and re-close the lever.

2 Assemble the Front Wheel

Put the front wheel (part d) on the front fork's slots (part e), and install the locking bolts (parts g & f) into the front wheel axle. Then tighten the two bolts by wrench (part h).

3 Assemble the Handlebar

Take off the protection pad. Use tool (T1) to loosen the two bolts (part j) counter-clockwise (Image 3), and rotate the handlebar 90° clockwise, making sure the handlebar is vertical to the wheel, and tighten the two bolts (part j) clockwise (Image 4).

Finally put back the protection pad.

IMPORTANT NOTICE

Please read the guide carefully and retain packaging for future reference.

Warning:

1. This product is not suitable for children under 2 years old.
2. Be careful of injury.
3. This product must be used under adult's supervision.
4. Make sure your child is equipped with helmet and pads before using this product.
5. Check the condition of the product before using.

Notice:

1. Please inform your child how to use the product. The bike should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
2. The product should be assembled by adult, please don't use before it's fully assembled.
3. Keep your child away before the balance bike is fully assembled.
4. Do not use the product in public places, on sandy or rocky roads, slopes, or hills. Please avoid riding in dangerous places such as stairs, ponds, swimming pools, etc.
5. Please ride the bike in safe areas such as at home, private areas, flat grounds, etc. The areas should be generally level to prevent tipovers.
6. Please don't use spare parts other than the manufacturer's recommendations.
7. Please check the product regularly to ensure that all components are not loose.
8. Never push or pull the bike when being used by a rider.
9. Please do not immerse the bicycle in water. Moving parts should be lubricated regularly. If you need professional repair, please call your local dealer.

Maintenance Guide:

1. Torque the nuts and bolts before using. Please check if all nuts and bolts are tightened on the bike. It's recommended to use a wrench to tighten all of the nuts and bolts to correct torque, shown below.
2. Please check the tire pressure regularly. To make sure the tire is inflated correctly, refer to the tire pressure listed on the tire. Riding the bike with low tire pressure may damage the inner tube.

Appendix: Torque for nuts and bolts

Nut Type	Torque Value	Unit
M5	7	N · m
M6	10.5	N · m
M8	18	N · m
M10	30	N · m

Any questions during assembly or usage, please feel free to contact: service@r-baby.net.

Product Name: CHIPMUNK BALANCE BIKE
Suitable Age: 2-5 years
Loading Weight: under 30 kg / 66 lb
Item No.: CM-B001
Supplier Name: ROYALBABY CYCLE BEIJING CO., LTD.
Website: www.r-baby.net

